

Enable the Hand Gesture on a SMART Board

SMART Board step-by-step guide

Before you begin: These instructions use the SMART Board controls shown in Wolf Creek classrooms. Menu placement may vary slightly after a software update.

STEP 1 Open SMART Settings

Open the SMART software menu from the Windows notification area, then select SMART Settings.



Open SMART Settings.

STEP 2 Open SMART Hardware Settings


In the SMART Settings window, select SMART Hardware Settings.



Open SMART Hardware Settings.

STEP 3 Open Mouse and Gesture Settings


Choose Mouse and Gesture Settings from the settings list.

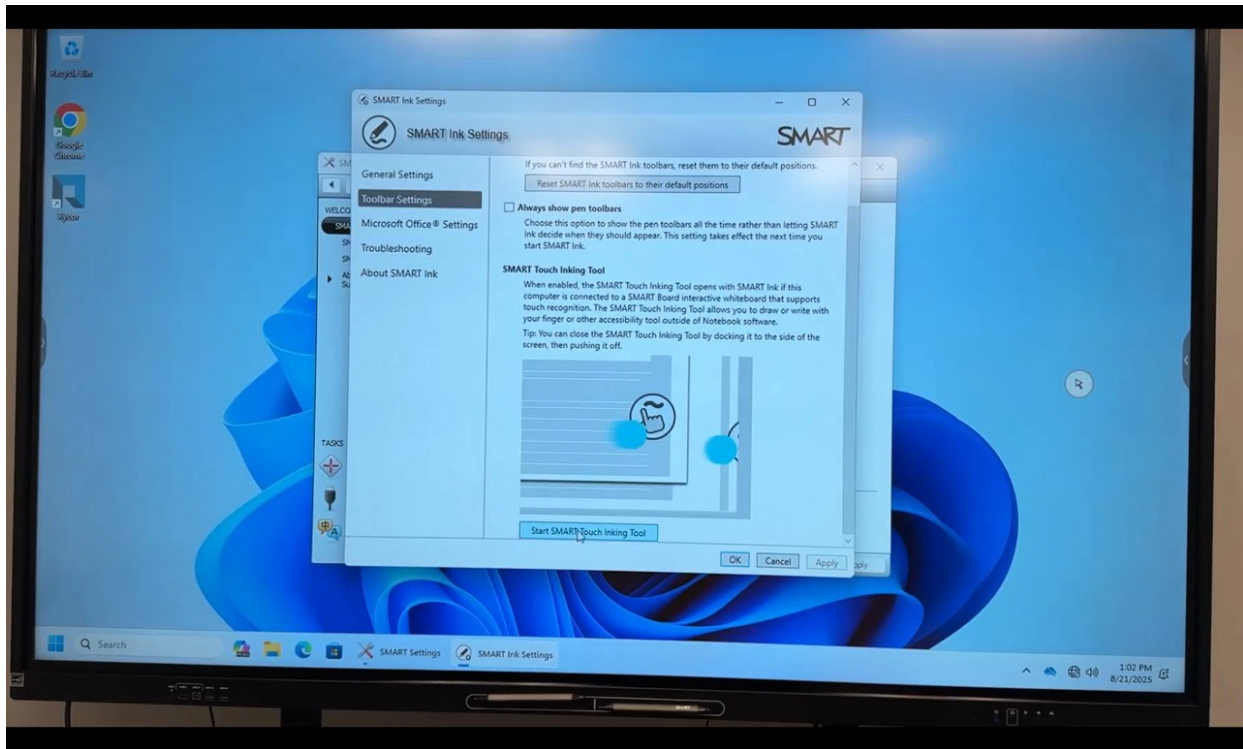

Open Mouse and Gesture Settings.

STEP 4 Enable multitouch gestures

Turn on the multitouch gesture option, apply the change, and close the settings window.

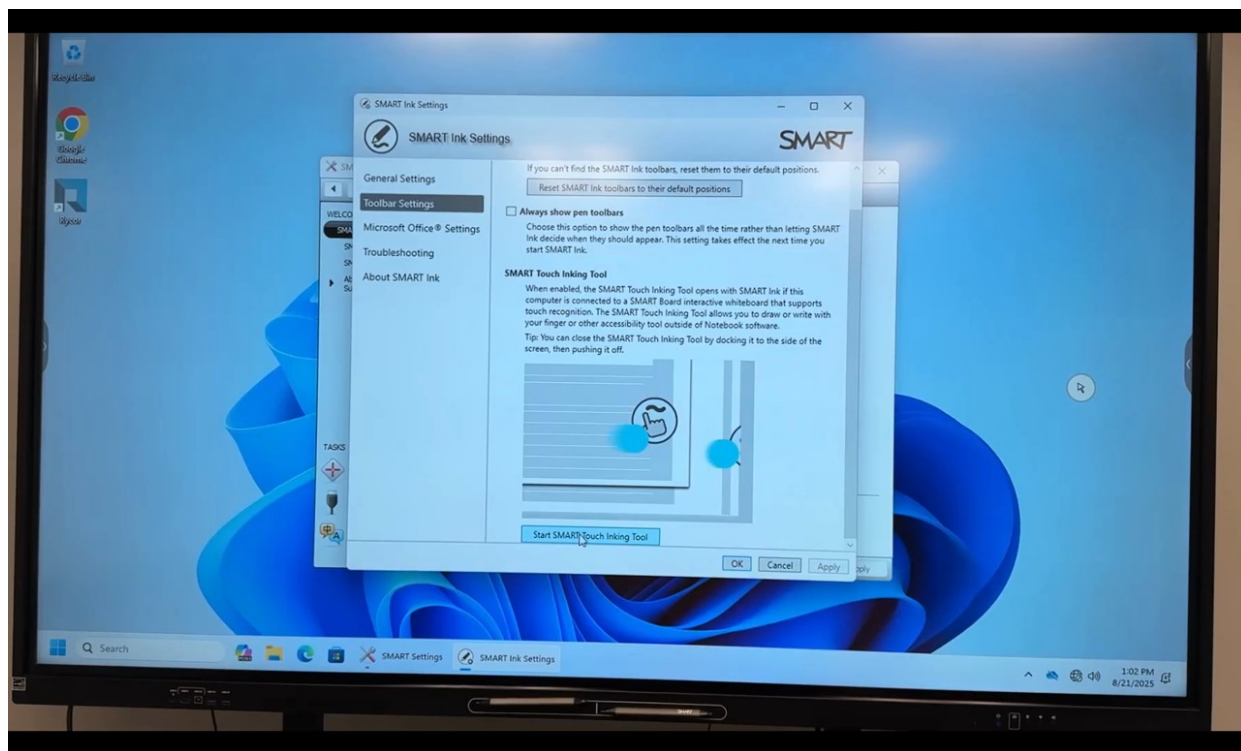

Enable multitouch gestures.

Finished

The SMART Board is ready to use. If the control does not respond as shown, restart SMART services or submit a Freshdesk request.